


## Simplified Buried Permit Process Example

1) Extract Parcel Data from SpatialNet and request land-base files from municipality and/or region.

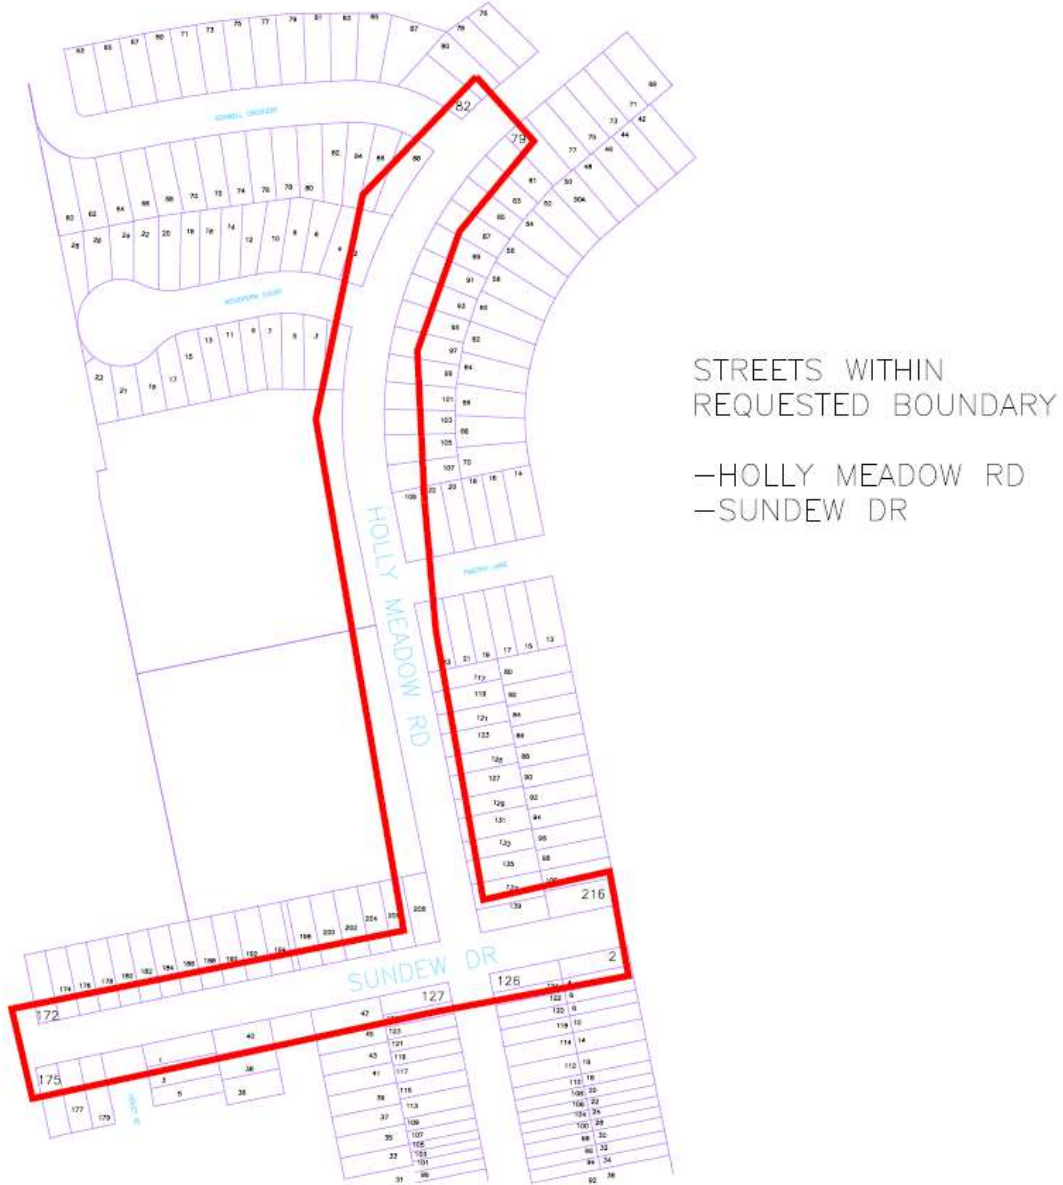


2)Overlay with Aerial Imagery



### 3)Collect GPS Points



\*Each Individual colour represents a different piece of infrastructure in the field\*

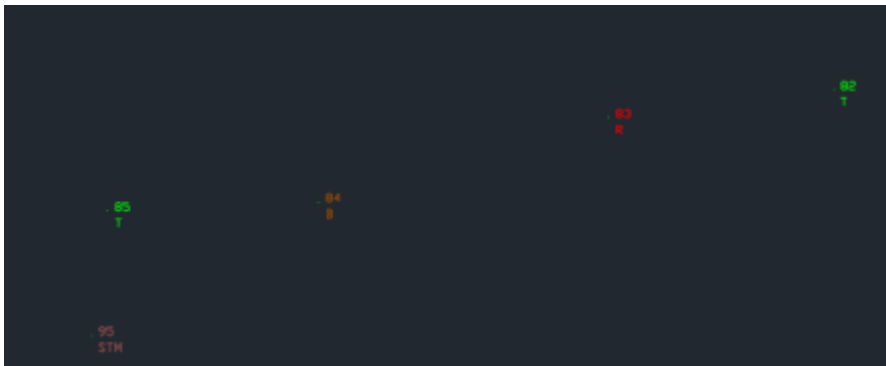

T = Tree

STM=Storm Manhole

R=Rogers Pedestal

B=Bell Pedestal



5)Completed Permit

